

Aesculap Schermaschinen

spare part list: GT6xx Bonum



GT640220 spur gear



GT647 cutter head packed cattle
GT657 cutter head packed horse



GT367201 rocker



GT367202 vibratory spring



GT640215 PT-screw 30x14



GT640225 regulating screw

Aesculap Schermaschinen

spare part list: GT6xx Bonum



GT367207 cylinder screw



 
GT367802 spacer piece left



GT367803 spacer piece right



GT610405 nut

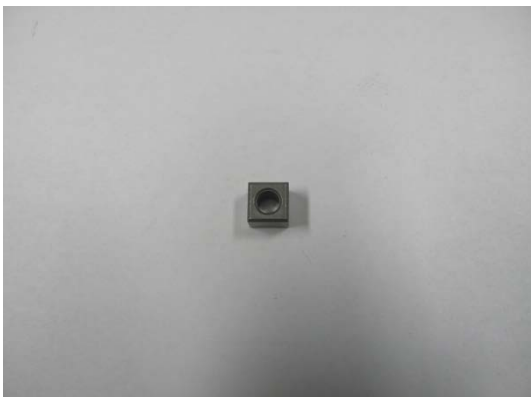

GT610304 rocker



GT610307 spring link

Aesculap Schermaschinen

spare part list: GT6xx Bonum



TA008295 screw shaft



TA010017 screw M4x16



TA015497 screw M5x12



GT641 Li-Io-batterie



GT643 (-G / -K / -A) charging station

Aesculap Schermaschinen

spare part list: GT6xx Bonum



TA015304 instruction for use



TA015349 case sticker cattle



TA015350 case sticker horse



TA015351 case sticker horse



 
GT640819 hard case

Aesculap Schermaschinen

spare part list: GT6xx Bonum




GT640895 engine packed

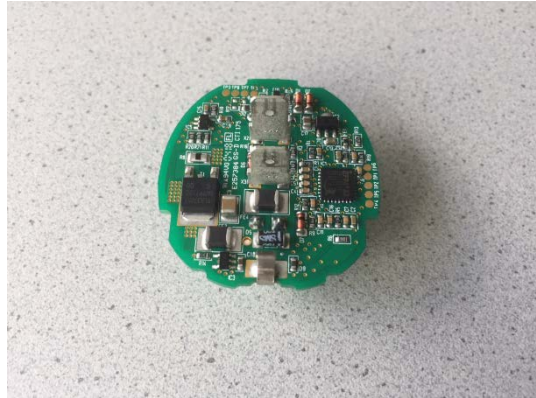

GT640896 PCB packed



 GT640801 lower case

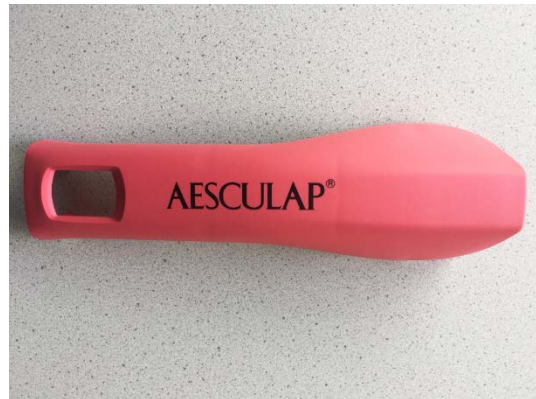

GT640802-RO upper case




GT640802-BL upper case



GT640802-OG-GEA upper case

Aesculap Schermaschinen

 spare part list: GT6xx Bonum

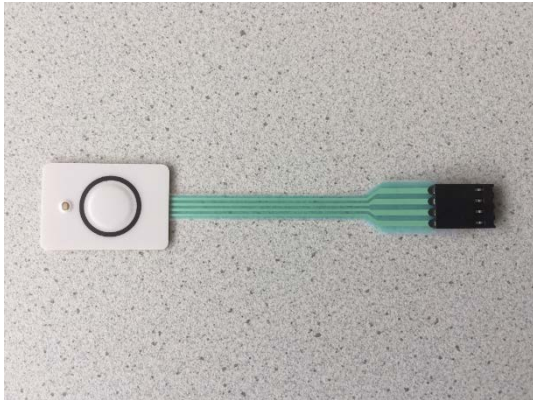

GT640249 switch



GT640248 button holder



TA009222 screwdriver



GT604 oil packed

Version von 2019/04/25